



56885 Enterprise Dr.
Suite #103
Sunriver, OR 97707
253.445.8790

velocity
SPORTS EQUIPMENT™

Installation of Velocity Sports Equipment Collapsible Pilot Chute

1) Take the one piece retention line (1-1) and the bag attachment point (1-2) .




1-1



1-2

2) Thread through the deployment bag by pulling the bag attachment point through the #4 grommet (1-3).

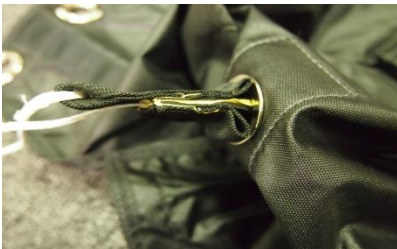

1-3

3) Compress the outer layer of the retention line to create a loop (1-4). Run the attachment loop through the canopy attachment point and thread the deployment bag and pilot chute through the loop (1-5) and pull the retention line taut to remove the slack (1-6).



1-4



1-5



1-6

How to cock your VSE Collapsible Pilot Chute:

Using one foot, stand on the deployment bag and pull the pilot chute handle until the center line (kill line) of the pilot chute are taut. **Do this before packing canopy into the deployment bag.**

Verify that the pilot chute is cocked: A blue kill-line (1-7) will be showing in the bridle window (near the closing pin) when the pilot chute is cocked.



1-7